


USER MANUAL

Ergo2 Series

MotionGrey

Notes:

1. Operating voltage: AC100~240V, frequency 50/60HZ.
2. Operating temperature range: -0~40°C.
3. Before usage, ensure all power lines are securely connected.
4. Prior to use, assess the surroundings to ensure there are no obstacles above or below the desk.
5. This item is not intended for use by children; adult supervision is required.
6. Do not use if any cables or electrical components are damaged.
7. The desk is not designed for mobile use; if necessary, take precautions to prevent damage.
8. Slight trembling during the desk's ascent and descent is normal and will not impact its lifespan.

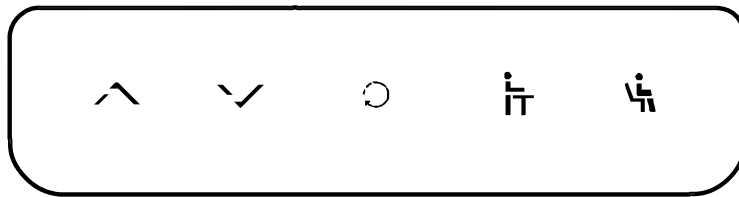

UP: Up Button



DOWN: Down Button



Reset Button



STAND: Saving Button 1



SIT: Saving Button 2

UP and DOWN Button Operation

- Press the “” button to raise the desk.
- Press the “” button to lower the desk.
- Press and hold the “” or “” button for 3 seconds, then release it, to automatically raise or lower the desk to the highest or lowest position.
- While the desk is raising or lowering, you may press any button to stop the desk.

Height Position Memory Operation

- Storage of standing position: Press and hold the “” button for 5 seconds to save the current standing position.
- Storage of sitting position: Press and hold the “” button for 5 seconds to save the current sitting position.

Reset Operation

- Press and hold the “” button for 5 seconds. The table will descend to the lowest position, Pause for 5 seconds, then rise to the highest position. The desk will then return to the initial position.