

MOTIONGREY

Assembly Instructions


Motion Chroma Standing Desk



Scan to access the step-by-step installation instructions and video.

SCREW ACCESSORIES

S1

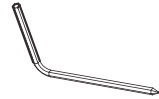

6mm Allen Key x1

S2




M8x16 x18

S3




M8x25 x8

S4

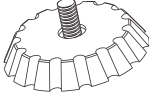

Feet Leveler x4


S5

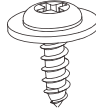

M4x14 x28


PARTS ACCESSORIES

A

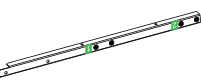


Left Frame Rail x2

B

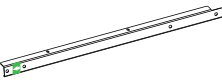


Right Frame Rail x2

C

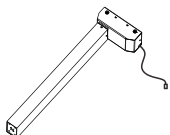


Leg Frame x1

D

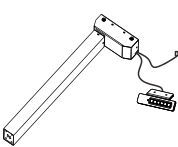


Main Leg Frame with Keypad x1

E

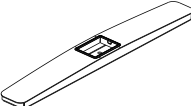


Desk Feet x2

F

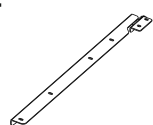


Left Side Panel x1

G

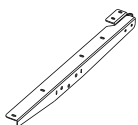

Right Side Panel x1

H

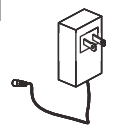

Power Adapter x1

I



 
Side Plastic Cap x2

J




Headphone Hanger x1

K




Rear Tabletop x1

 L




Main Tabletop x1

M

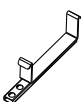

Cable Tray Bracket x2

N

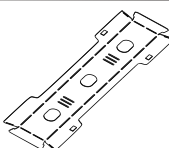

Under-desk Cable Tray x1

O




Magnetic Cable Organizer Box x1

P



Magnetic Cable Holder x4

Q

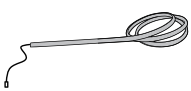

RGB Light Strip x1



R




Cable Clip x9

STEP 1

Connect the Frame Rails

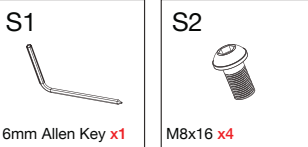
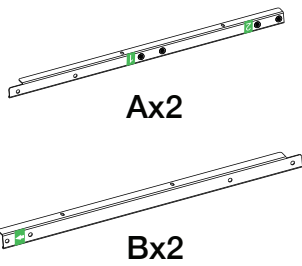


Connect frame rails (A, B) with screws (S2). Tighten using Allen key (S1). Choose the correct frame rail position based on the desktop length.

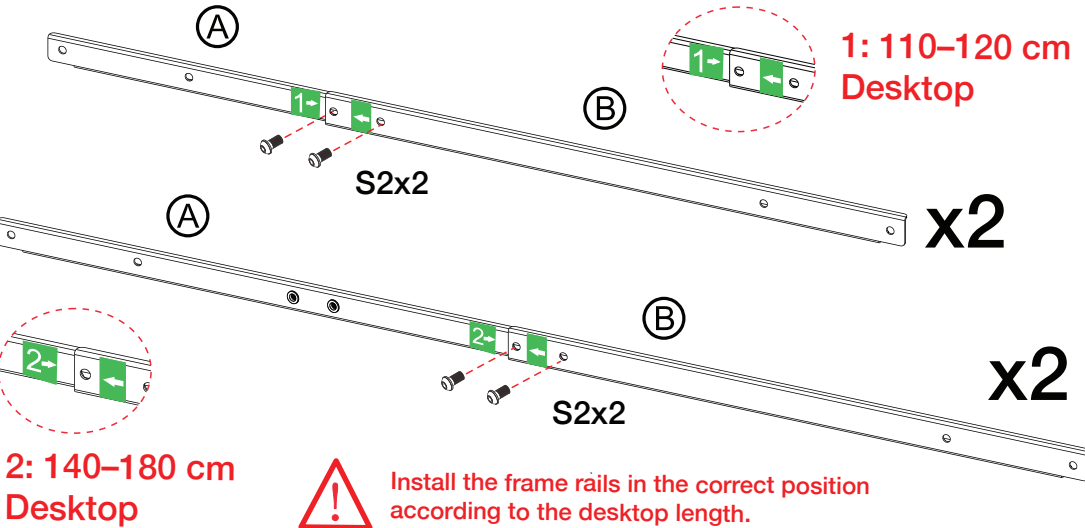


STEP 2

Attach the Leg Frames

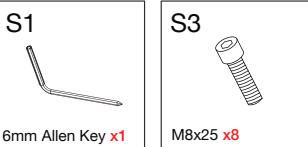
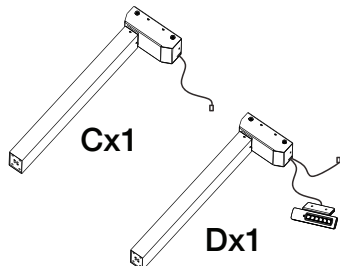


Connect leg frames (C, D) to the frame rails with screws (S3). Tighten using Allen key (S1).

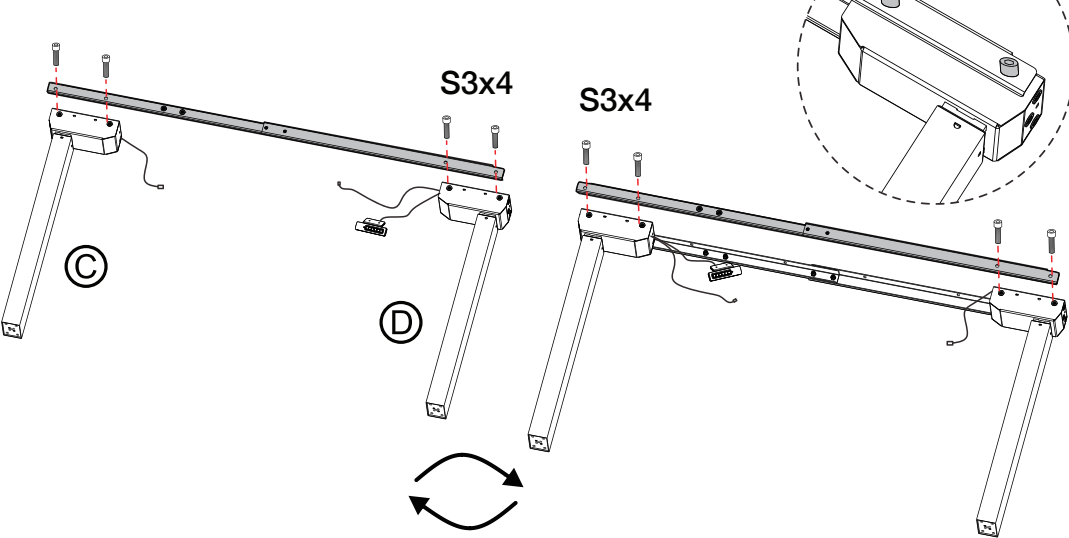


STEP 3

Attach the Desk Feet

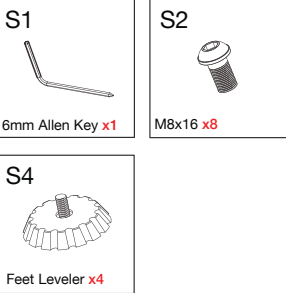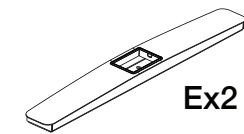




Connect desk feet (E) to the leg frames with screws (S2). Install feet levelers (S4).

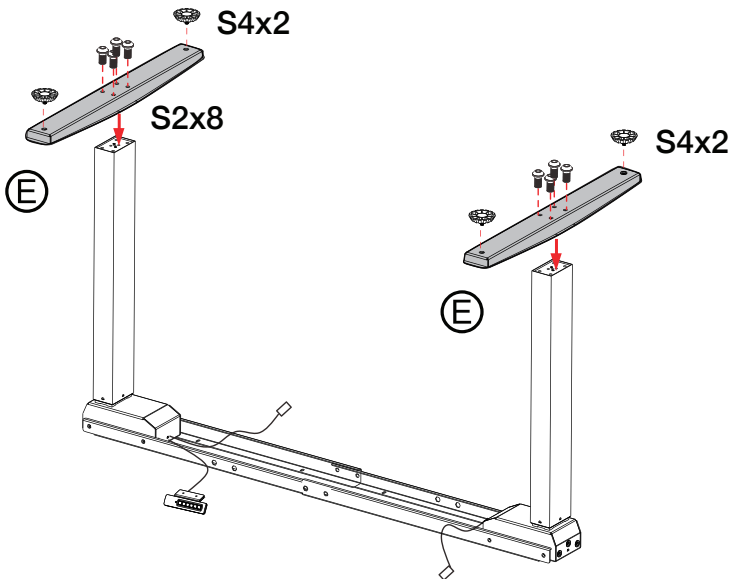

STEP 4




Install the Side Panels and Side Plastic Caps

Connect the left and right side panels (F, G) to both ends of the frame with screws (S2). Insert side plastic caps (I).

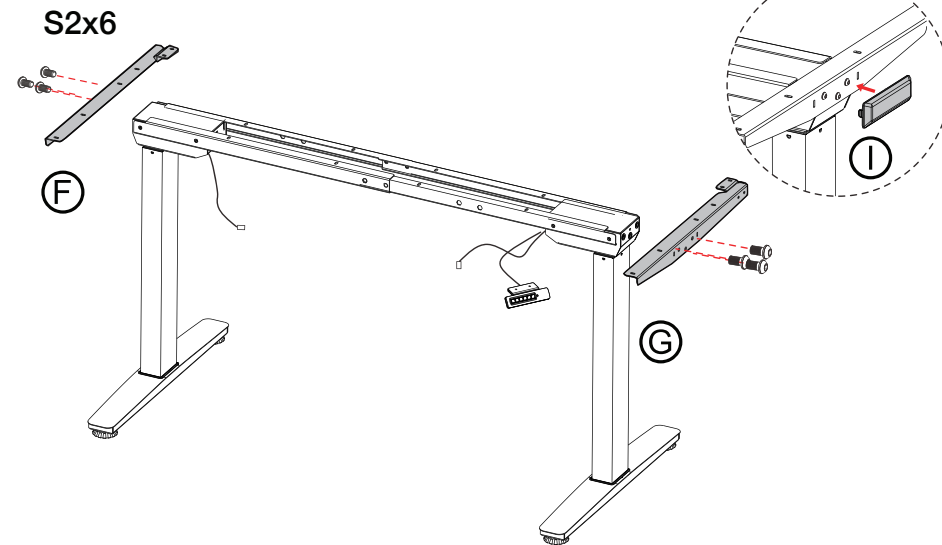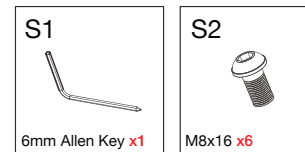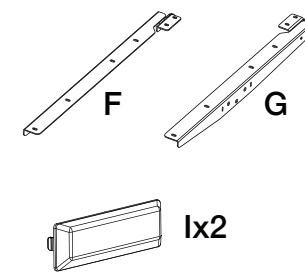

STEP 5




Secure the Desktop and Connect Cables

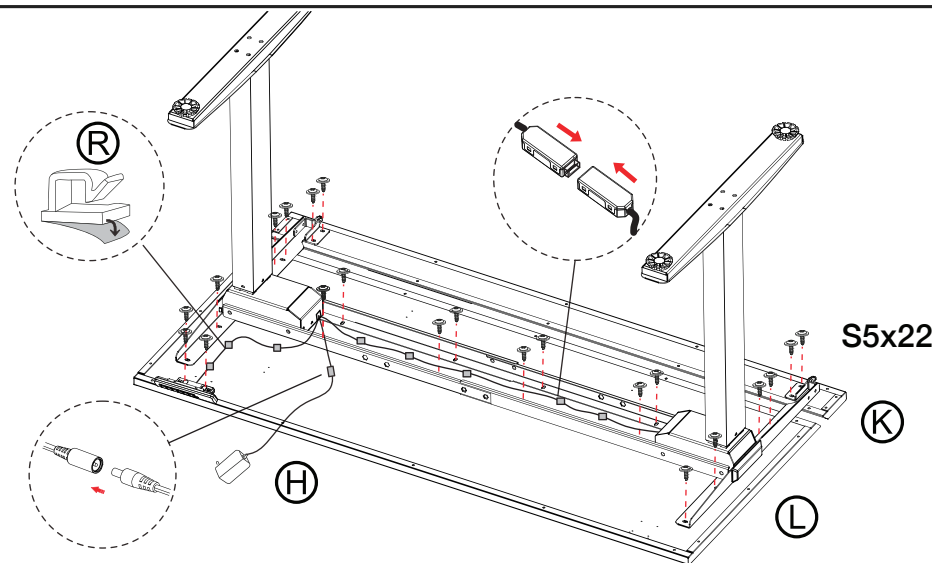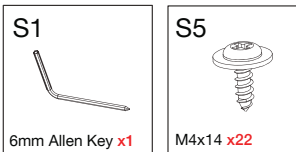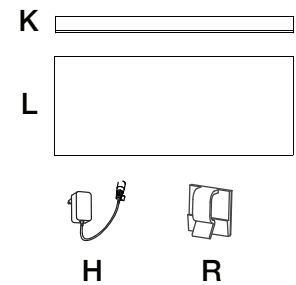

Place the frame onto the rear and main tabletops (K, L) and secure it with screws (S5). Install the power adapter (H) and cable clips (R), then connect the cables.

STEP 6

Install the Cable Tray Brackets and Hanger

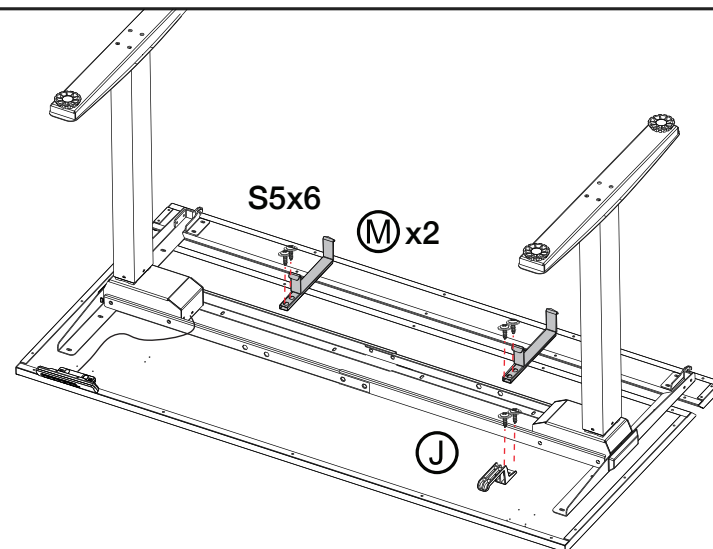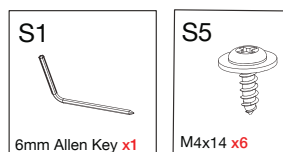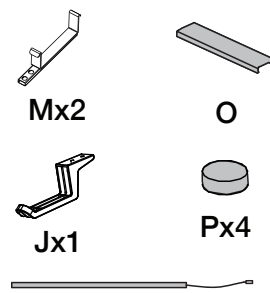


Install cable tray brackets (M) and headphone hanger (J) under the tabletop with screws (S5). Attach the magnetic cable organizer (O) and magnetic cable holders (P).

STEP 7


Install the Under-desk Cable Tray and RGB Light Strip

Install the under-desk cable tray (N) onto the cable tray brackets.

Place the RGB Light Strip (Q) into the cable tray to finish the installation.

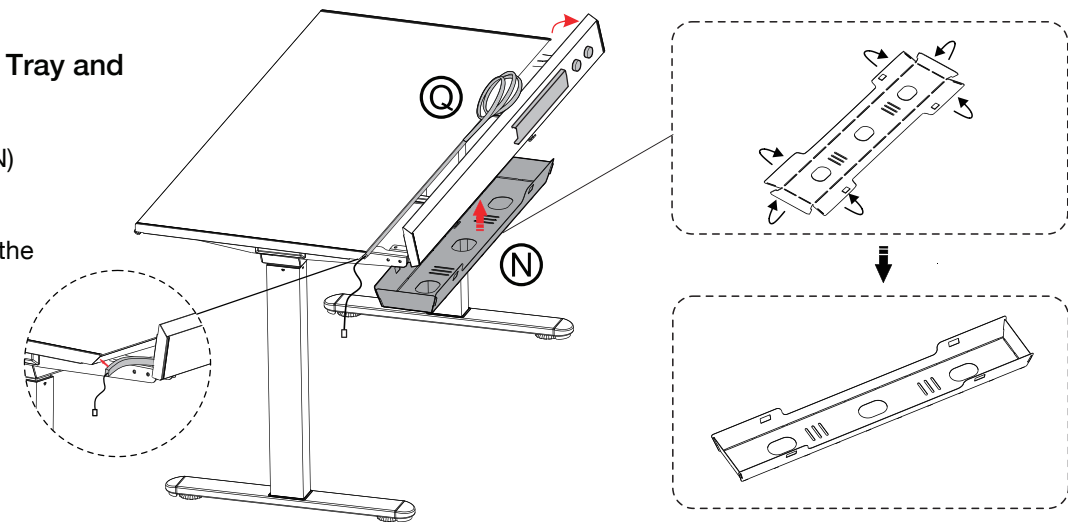

Control Keypad Instructions

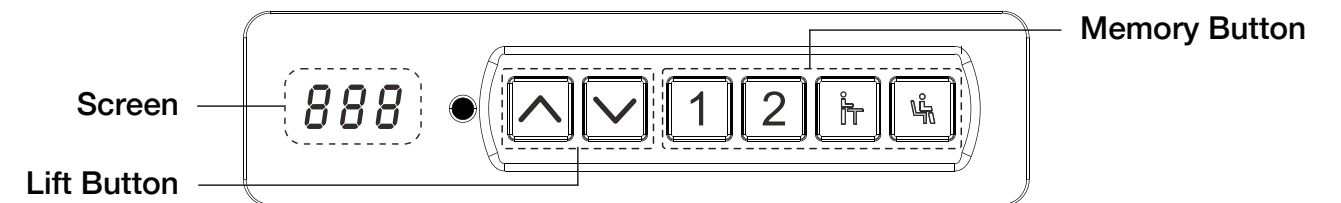

Up and Down Button Operation

Press the “” button to raise the table. Press and hold the “” button for 3 seconds, then release it to automatically raise the table to the highest level.

Press the “” button to lower the table. Press and hold the “” button for 3 seconds, then release it to automatically lower the table to the lowest height.

Memory Function Operation

The “” button is set to the minimum height by default.
Custom Setting: Raise or lower the table to the desired position. Press and hold the button for 3 seconds until the screen flashes, indicating that the setting has been saved successfully.

The “” button is set to the maximum height by default.
Custom Setting: Raise or lower the table to the desired position. Press and hold the button for 3 seconds until the screen flashes, indicating that the setting has been saved successfully.

The “” button is set to 80 cm by default.
Custom Setting: Raise or lower the table to the desired position. Press and hold the button for 3 seconds until the screen flashes, indicating that the setting has been saved successfully.

The “” button is set to 100 cm by default.
Custom Setting: Raise or lower the table to the desired position. Press and hold the button for 3 seconds until the screen flashes, indicating that the setting has been saved successfully.

Child Lock Function

Press and hold the “” and “” buttons at the same time for 5 seconds. The screen will display LOC, indicating that the child lock is activated. Press and hold both buttons again for 5 seconds to deactivate the child lock.

Reset Operation

Press and hold the RST button for 5 seconds, then release it to enter reset mode. The reset is complete.