

MOTIONGREY

Assembly Instructions

Motion Series Ultra Standing Desk



Scan to access the step-by-step installation instructions and video.

SCREW ACCESSORIES

S1



6mm Allen Key **x1**

S2



M8x16 **x16**

S3



M8x25 **x8**

S4



Feet Leveler **x4**


S5



M4x14 **x21**


PARTS ACCESSORIES

A

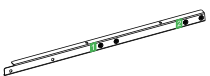


Left Frame Rail **x2**

B

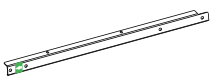


Right Frame Rail **x2**

C

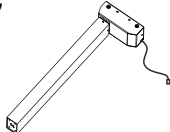

Leg Frame **x1**

D

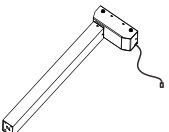


Leg Frame **x1**

E




Desk Feet **x2**

F

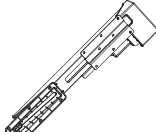


Side Panel **x1**

G

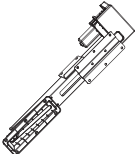


Side Panel **x1**

H

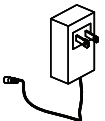


Power Adapter **x1**

I

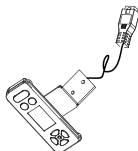


Control Keypad **x1**

J

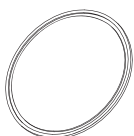


Cup Pad **x1**

K

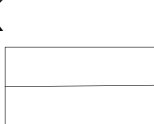


Tabletop **x1**

L

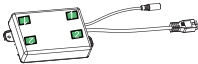


Control Box **x1**

M

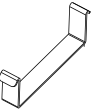

Cable Organizer Bracket **x2**

N

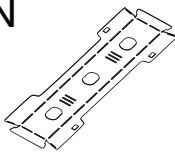

Cable Box **x1**

O



Wrist Rest **x1**

P



Magnetic Cable Holder **x4**

Q



Magnetic Cable Organizer Box **x1**

R



Phone Holder **x1**

S



Cable Clip **x9**



T




Cable Tie **x6**

STEP 1

Connect the Frame Rails

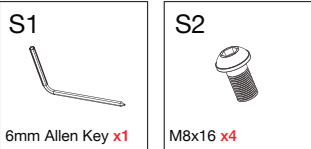
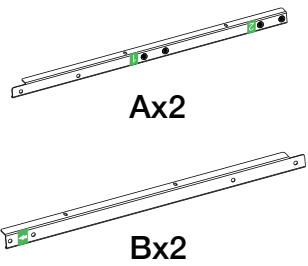


Connect frame rails (A, B) with screws (S2). Tighten using Allen key (S1).

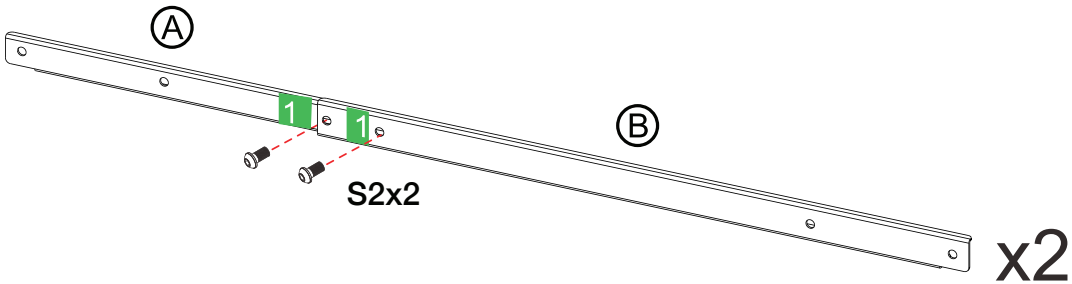


STEP 2

Attach the Leg Frames

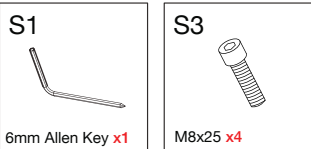
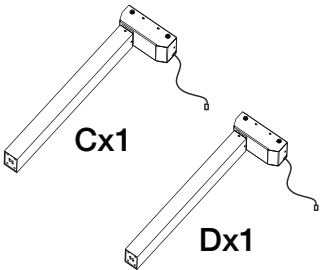


Connect leg frames (C, D) to the frame rails with screws (S3). Tighten using Allen key (S1).

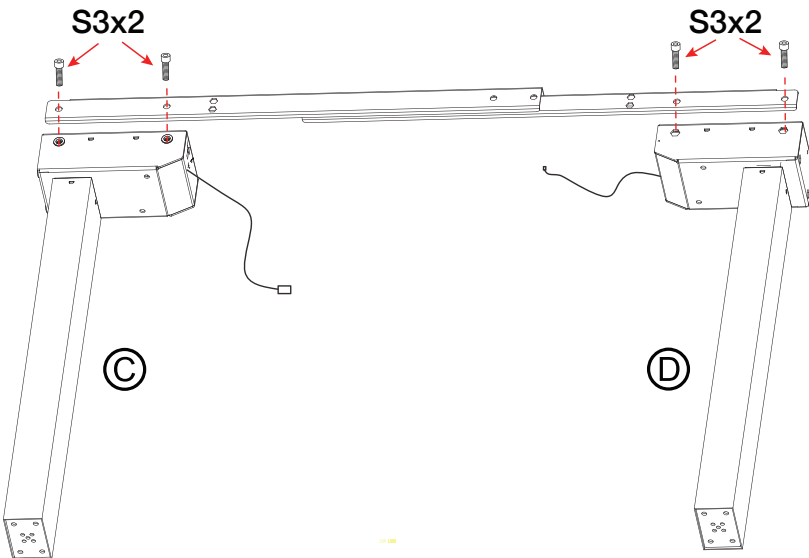


STEP 3

Attach the Desk Feet, Brackets, and Feet Levelers

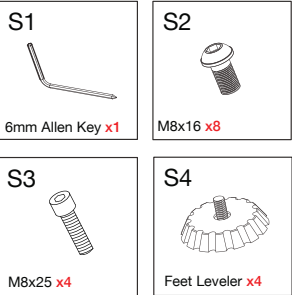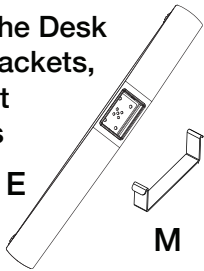

Connect desk feet (E) to the leg frames with screws (S2).


Install cable organizer brackets (M), then secure with screws (S3). Install feet levelers (S4).

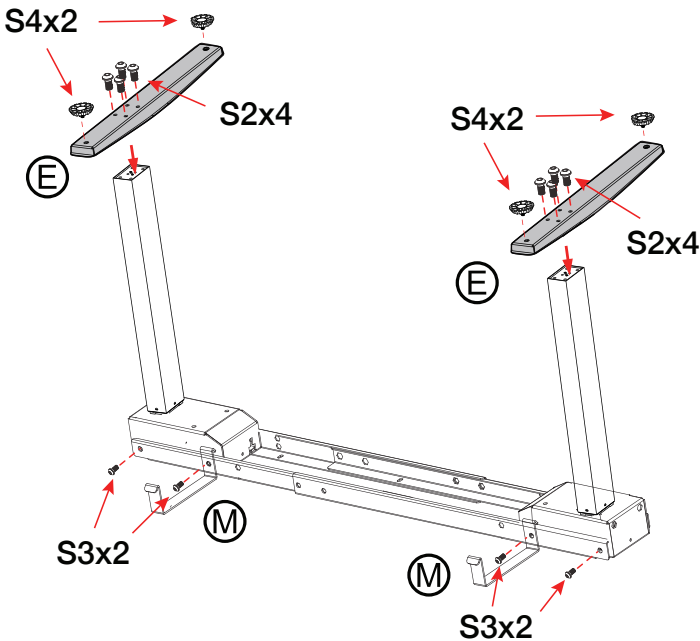

STEP 4

Install the Side Panels

Connect side panels (F, G) to both ends of the frame with screws (S2). Tighten using Allen key (S1).

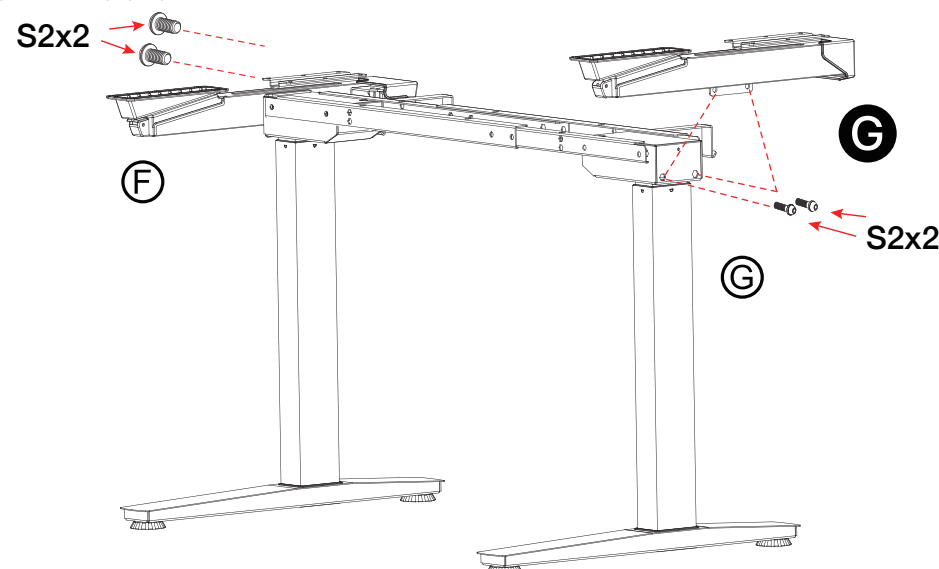


STEP 5

Install the Tabletop, Control Keypad, and Control Box


Place the frame onto the tabletop (K) and secure it with screws (S5).

Install the control keypad (I), connect the cables, and attach the control box (L).

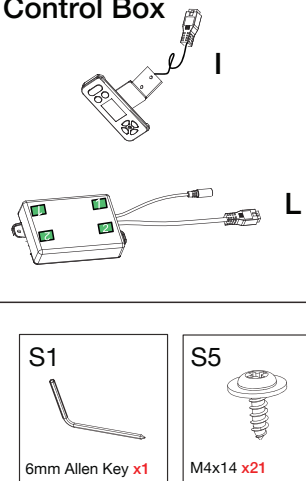

STEP 6


Install the Cable Box, Power Adapter, and Cable Organizers

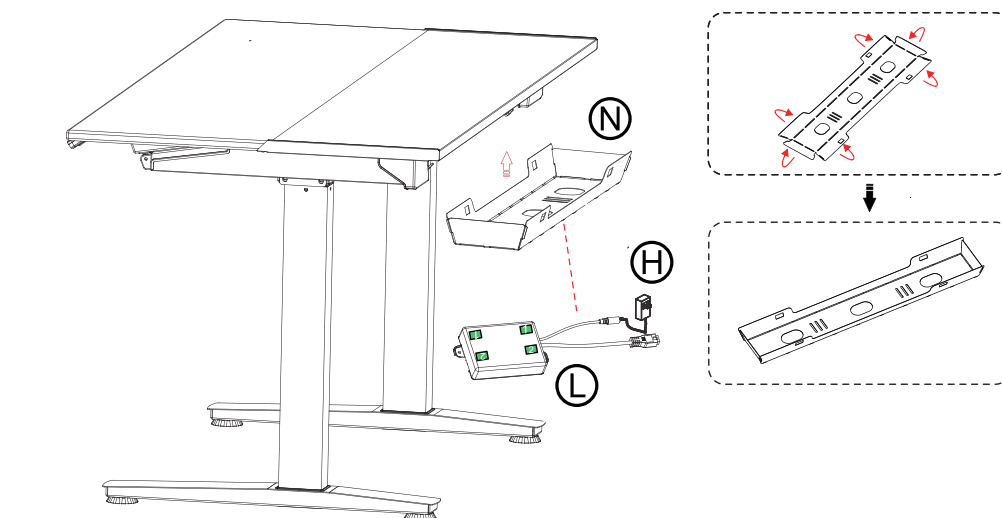

Install cable box (N) under the desktop. Attach power adapter (H), then install magnetic cable organizer box (Q) and magnetic cable holders (P).


STEP 7

Install the Desktop Accessories

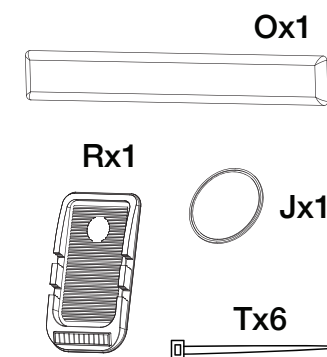


Install the cup pad (J), wrist rest (O), and phone holder (R) on the tabletop as shown.

Use cable ties (T) to organize cables as needed.

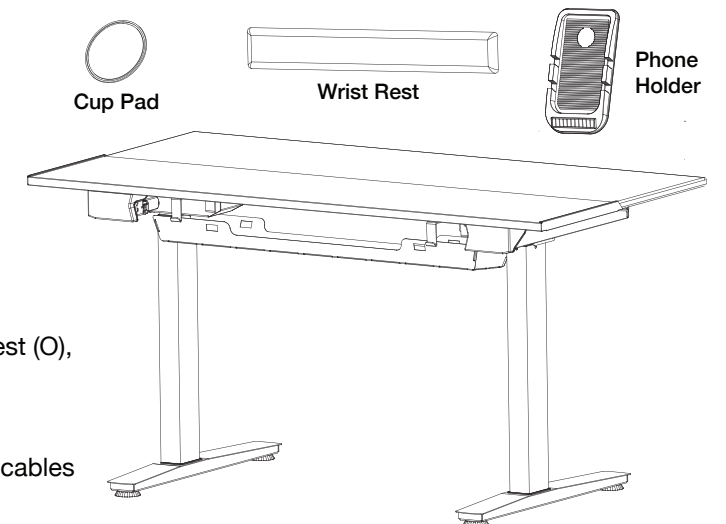

Control Keypad Instructions

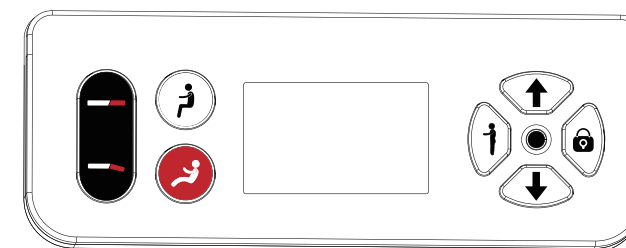

Display	Decrease Incline Button	Memory 1 Button	Memory 3 Button	Up Button
RST: Reset Button	Increase Incline Button	Memory 2 Button	Child Lock Button	Down Button

1. Position Reset

- Press and hold the “RST” button until the desk reaches its lowest position and slightly rebounds. This movement indicates that the reset process is complete.
- Release the button to finish the reset procedure.

2. Lifting Operation

- Press and hold the “↑” key on the controller to raise the desk. Release the key to stop.
- Press and hold the “↓” key on the controller to lower the desk. Release the key to stop.

3. Tilting Operation

- Press and hold the “-” key on the controller to decrease the incline toward 0° flat position. Release the key to stop.
- Press and hold the “+” key on the controller to increase the incline up to 15°. Release the key to stop.

4. Height and Tilt Memory Setting

- Adjust the desk to the desired height and incline position.
- Press and hold the “M1”, “M2”, or “M3” button for 5 seconds.
- The screen will flash, indicating that the setting has been saved successfully.

5. Child Lock Function

- Press and hold the “🔒” button for 5 seconds.
- The display will show “🔒”, indicating that the child lock is enabled.
- To unlock, press and hold the “🔒” button again for 5 seconds until “🔒” disappears.