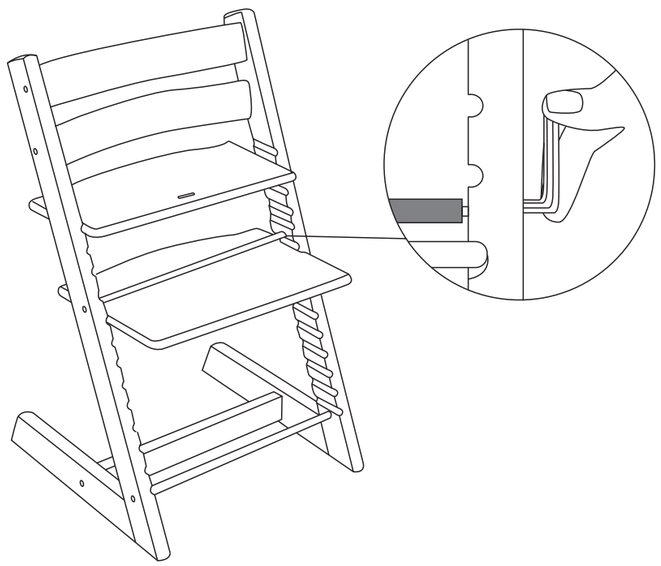


When the pedal position is close to the metal support rod , there will be a small gap between the inner side at chair leg and the metal support rods . This is normal case . and do not use excessive force when tightening the screws


Gentle reminder

1. This product is painted with environmental friendly water-based paint
It is strictly not encouraged to wipe with alcohol and chemical wet wipes ! It will damage its paint and surface

2 . For daily cleaning , wipe with a damp cloth and then dry the surface with a dry cloth

3 . The gear slot inside the chair leg is a cross-section of wood , which does not have smooth finishing and this is a normal condition.


Blessy Wooden High Chair

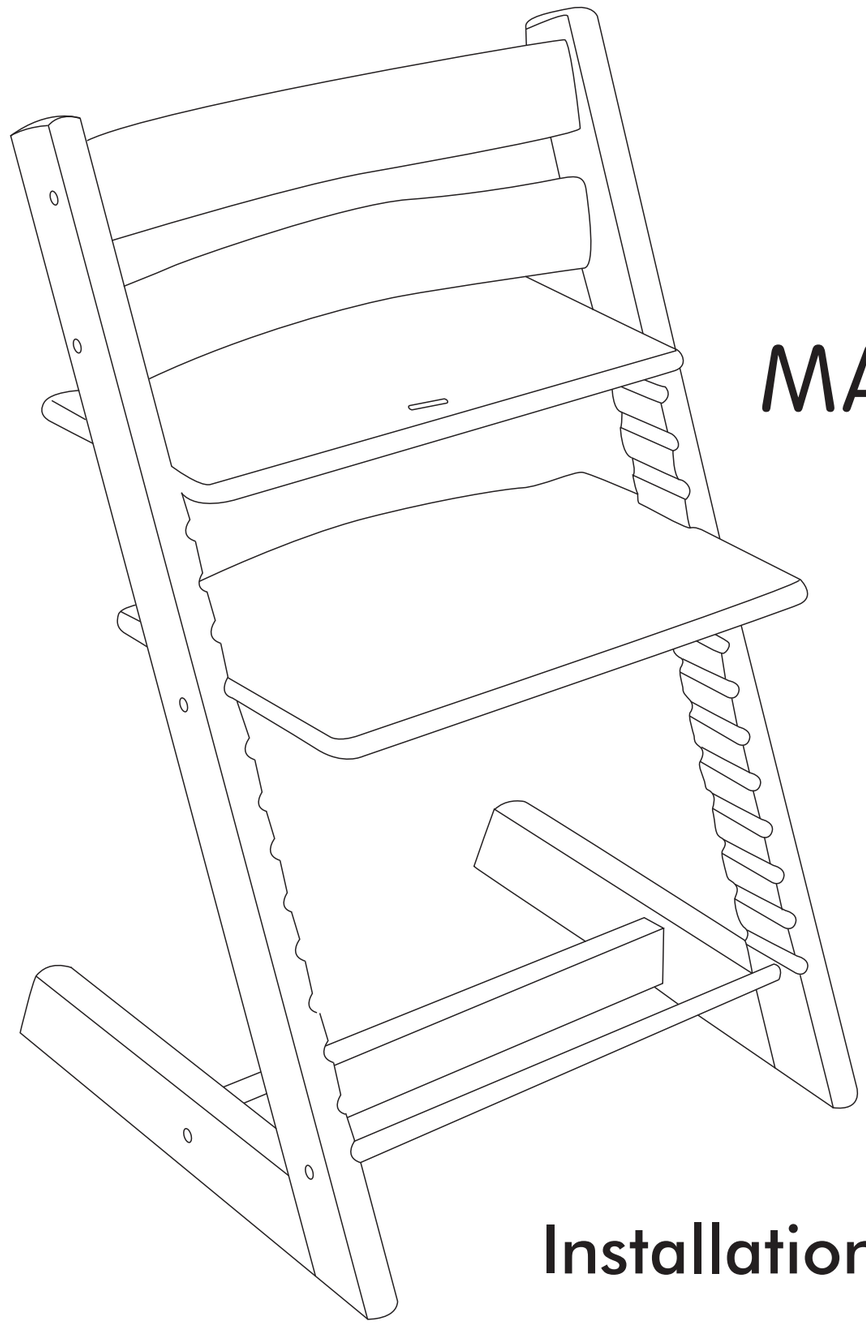

USER MANUAL

Installation Guide


Accessories

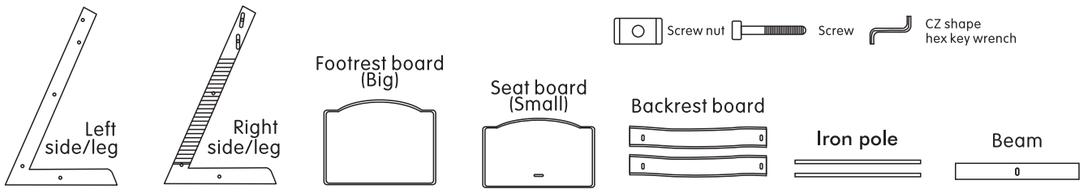


Installation Steps

Do not screw too tight for the initial placement, fully tighten the screw when installation is done


1 Leg side x2 · Beam x2 · Screw nut x2 · Screw x2 · Wooden dowel x2

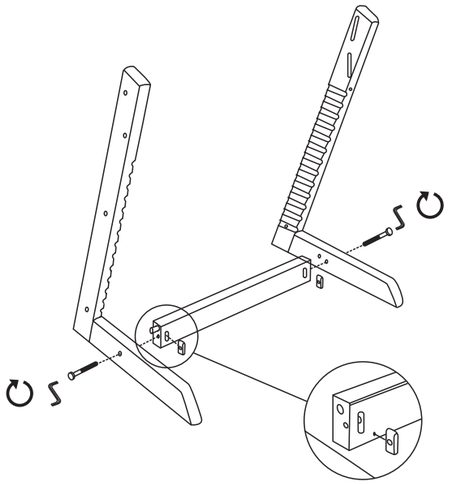


2 Iron pole x2 · Screw x4

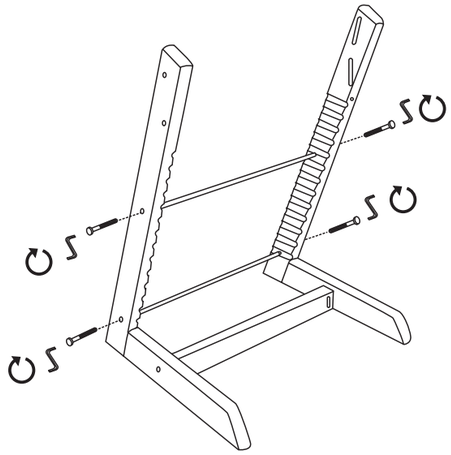

3 Backrest board x2 · Screw nut x4 · Screw x4

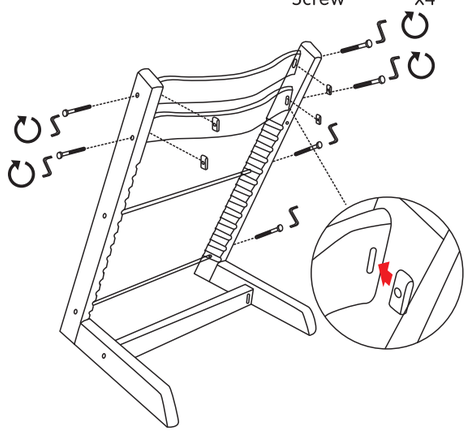

4 Footrest board(Big) x1 · Seat board(Small) x1

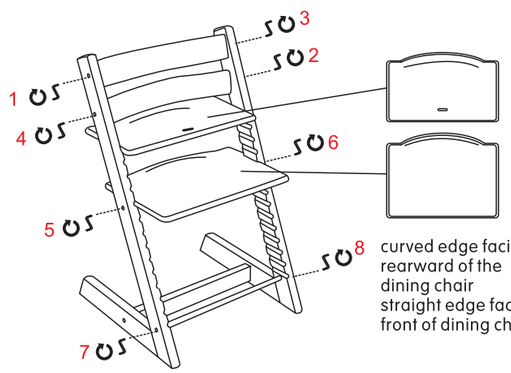

curved edge facing rearward of the dining chair
straight edge facing front of dining chair

Before tightening the screws , please refer to the seat plate and pedal positioning instructions as below 2
Before tightening the screws , place both hands on the top of the chair legs and shake it left and right to adjust and make sure it stand still on the ground.
Then follow the sequence of number identification to tighten the screws in the correct order . It is recommended to tighten the screws in two stages , not too tight in the beginning
Screw in place

Age	Seat board (Small) Slot number	Seat board (Small) depth	Footrest board(Big) Slot number
1/2~3	1	4~5cm	5
3~5	2	4~5cm	8
6~8	3	6~7cm	11
9~11			13
Teen-adult	Use footrest as seat panel, slot 4 or 5		

