

MOTIONGREY

AirGlide Chair - Assembly Instructions



Scan to access the step-by-step installation instructions and video.



SCREW ACCESSORIES

S1

M6x20mm x4

S2

M6x35mm x4

S3

M6x30mm x4

S4

M6x30mm x2

S5

Allen Key x1

PARTS ACCESSORIES

A

Caster Wheel x5

B

Gas Lift Piston x1

C

Star Base x1

D

Seat Mechanism x1

E

Armrest (Left & Right) x2

F

Backrest x1

G

Seat Cushion x1

H

Headrest x1

I

Backrest Screw Cover x4


J

Headrest Screw Cover x2

STEP 1

Install Casters and Gas Lift


Insert caster wheels (A) into the star base (C). Place the gas lift piston (B) into the center hole of the star base.

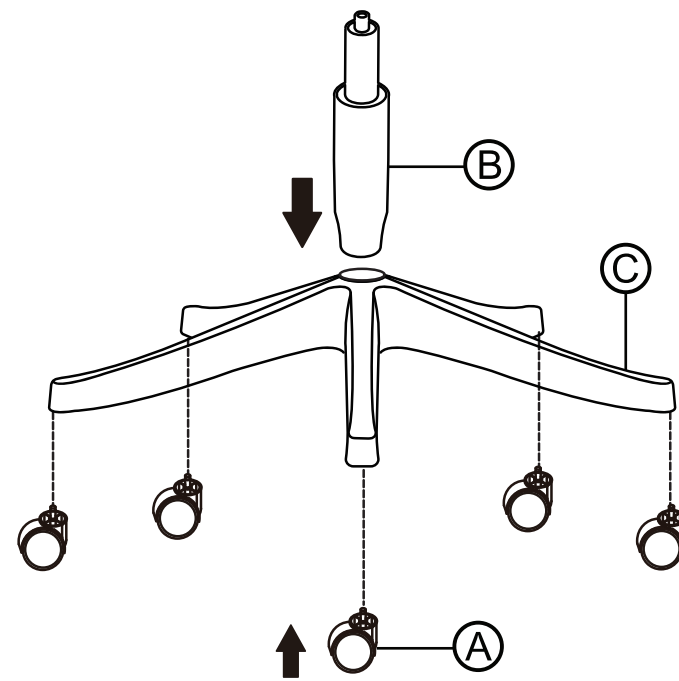

STEP 2

Attach Armrests to Backrest


Attach the left and right armrests (E) to the backrest (F) with screws (S3). Tighten using Allen key (S5).

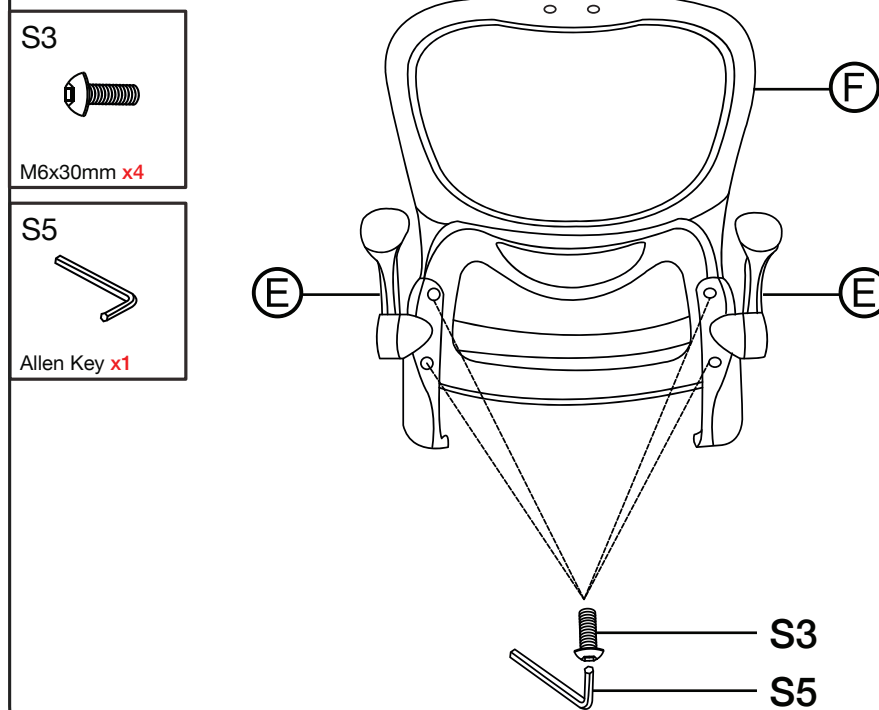

STEP 3

Attach Seat Cushion


Attach the seat cushion (G) to the backrest assembly with screws (S2). Tighten using Allen key (S5).

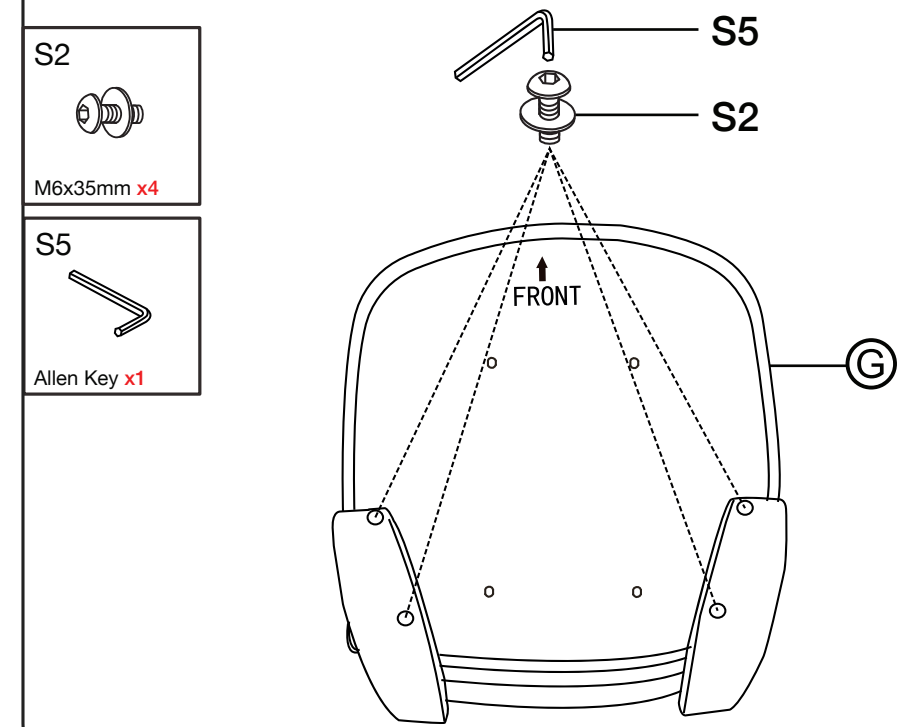

STEP 4

Attach Seat Mechanism


Attach the seat mechanism (D) to the bottom of the seat cushion using screws (S1). Tighten using Allen key (S5).

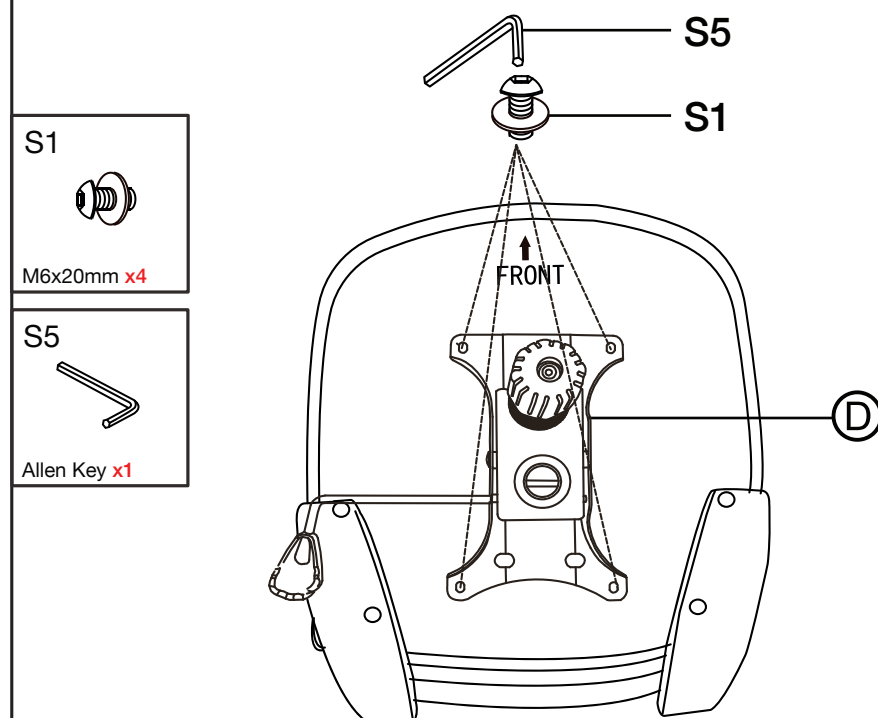

STEP 5

Connect Seat to Base


Place the assembled seat onto the gas lift piston. Press down firmly to secure it in place.

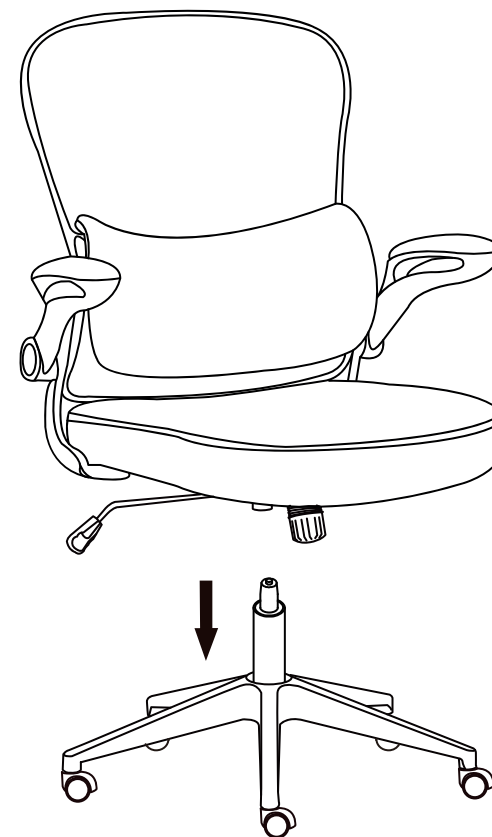

STEP 6

Install Headrest


Attach the headrest (H) to the top of the backrest with screws (S4). Tighten using Allen key (S5).

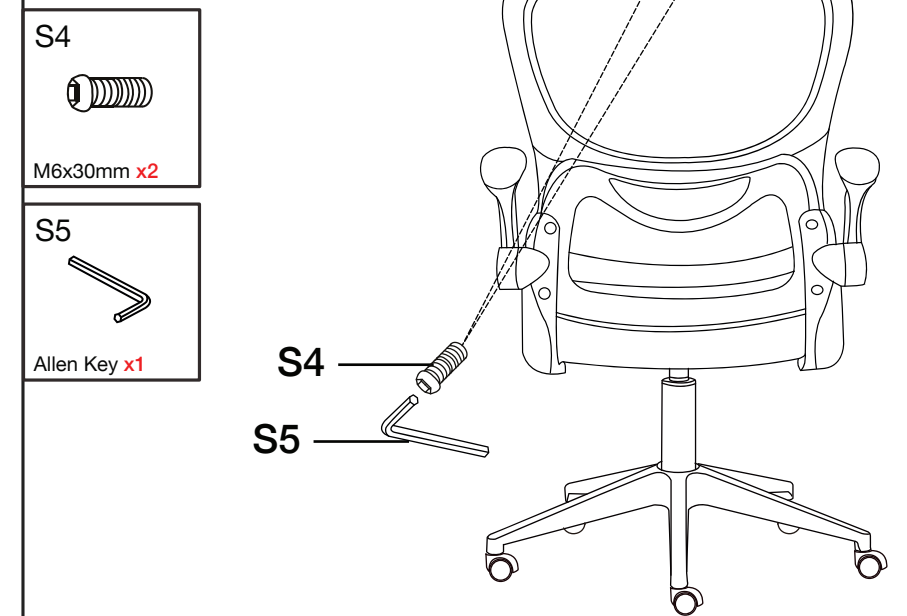

STEP 7

Install Cover Caps

Install the backrest screw covers (I) and headrest screw covers (J) to cover the exposed screw holes.

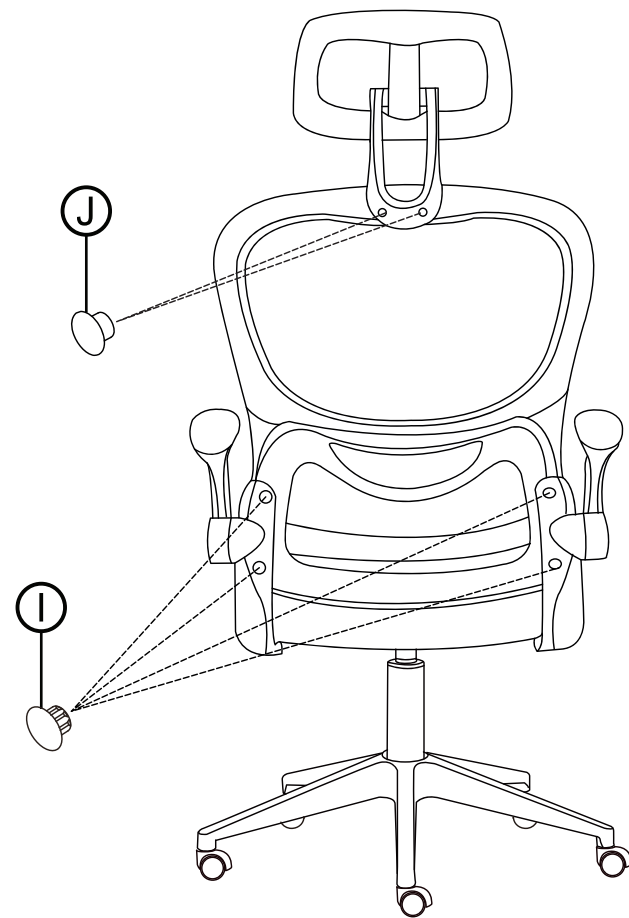

STEP 8

Finish Assembly

Check that all parts are securely installed and the chair is ready for use.

