

MOTIONGREY

FlexMesh Chair - Assembly Instructions



Scan to access the step-by-step installation instructions and video.




SCREW ACCESSORIES

S1



M6x20mm **x4**

S2




M6x30mm **x4**

S3



M6x20mm **x4**

S4

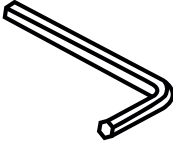

Allen Key **x1**

PARTS ACCESSORIES

A



Caster Wheel **x5**

B




Gas Lift Piston **x1**

C




Star Base **x1**

D

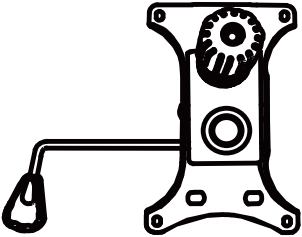


Seat Mechanism **x1**

E

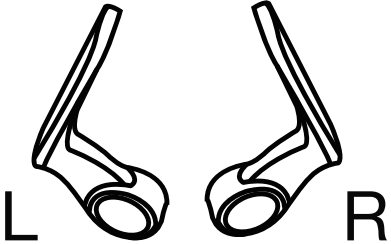


Armrest (Left & Right) **x2**

F

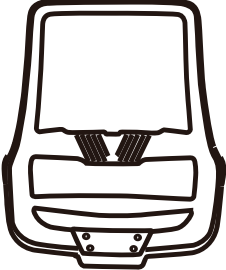


Backrest **x1**

G

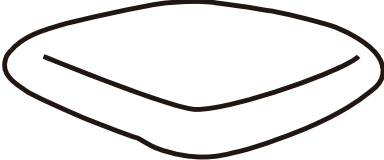

Seat Cushion **x1**

H

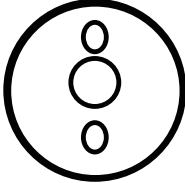

Armrest Spacer **x2**

I




Armrest Cover Cap **x2**

STEP 1

Install Casters and Gas Lift




Insert casters (A) into the star base (C). Place the gas lift piston (B) into the center hole of the star base.

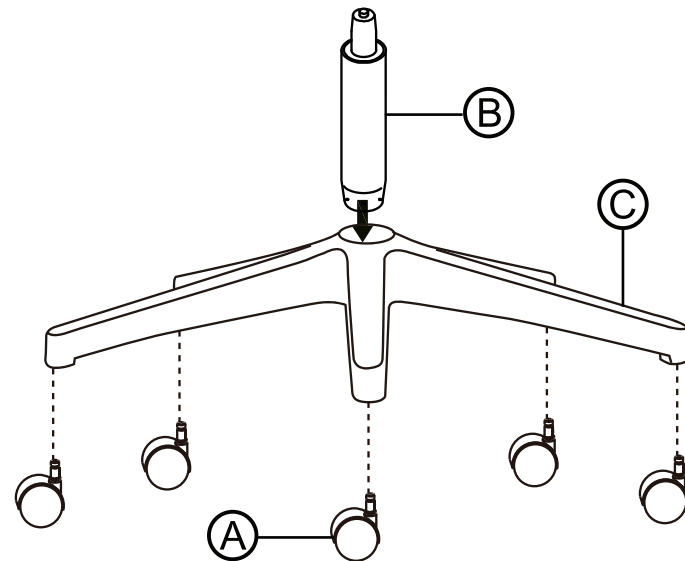

STEP 2

Attach Seat Mechanism




Attach the mechanism (D) to the bottom of the seat cushion (G) with screws (S1). Tighten using Allen key (S4).

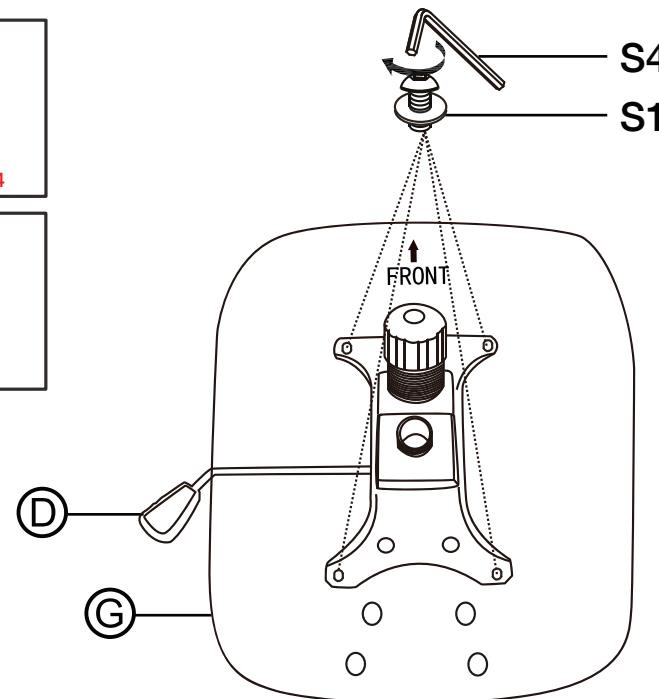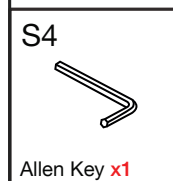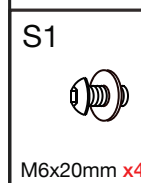

STEP 3

Attach Backrest




Attach the backrest (F) to the rear of the seat cushion using screws (S2). Tighten using Allen key (S4).

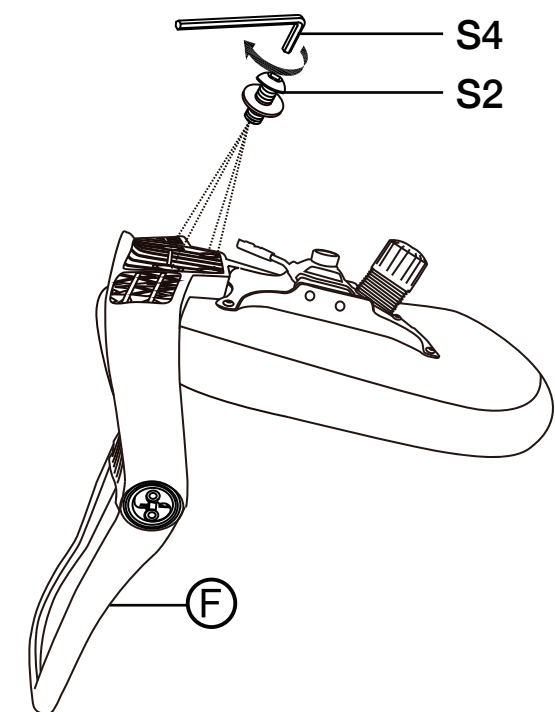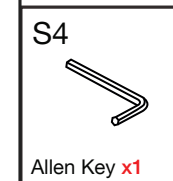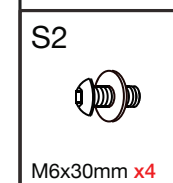

STEP 4

Install Armrests


Attach the left and right armrests (E) to the seat using armrest spacers (H) and screws (S3). Tighten using Allen key (S4).

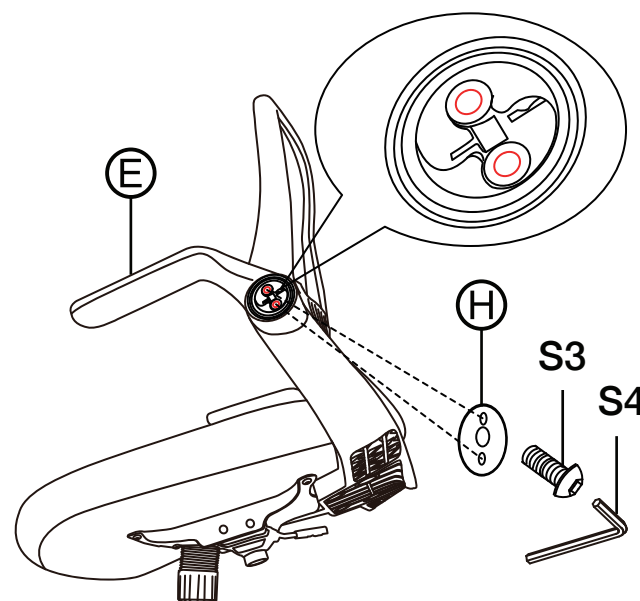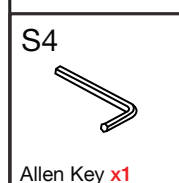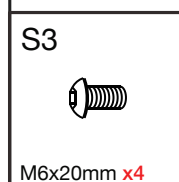

STEP 5

Connect Seat to Base

Place the assembled seat onto the gas lift piston (B). Install the armrest cover caps (I).

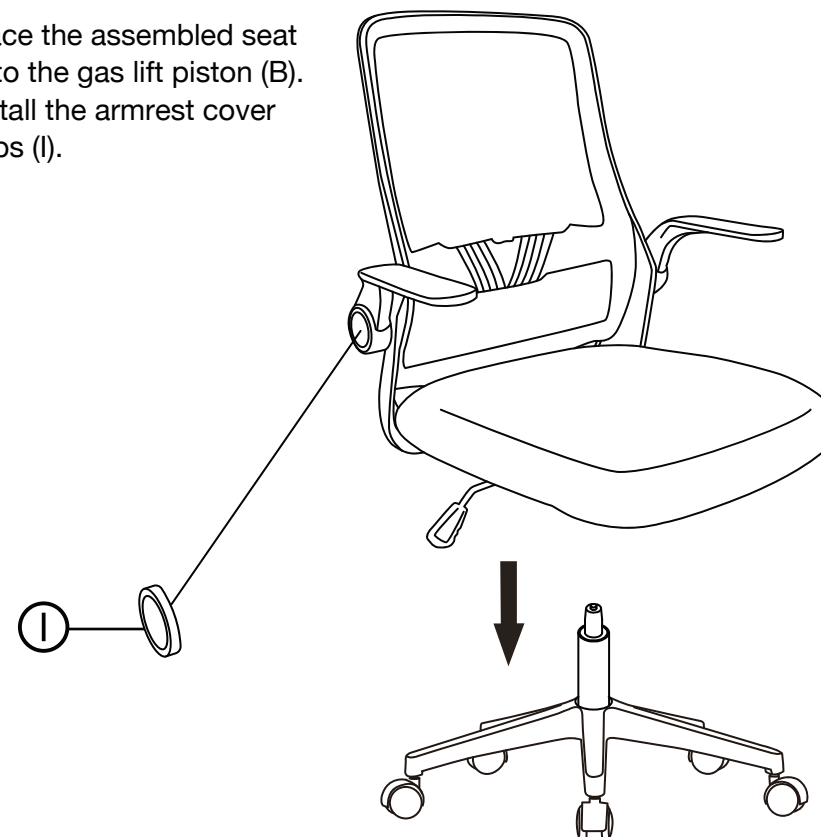

STEP 6

Finish Assembly

Check that all parts are securely installed and the chair is ready for use.

