





MOTIONGREY

ProMesh Chair - Assembly Instructions



Scan to access the step-by-step installation instructions and video.

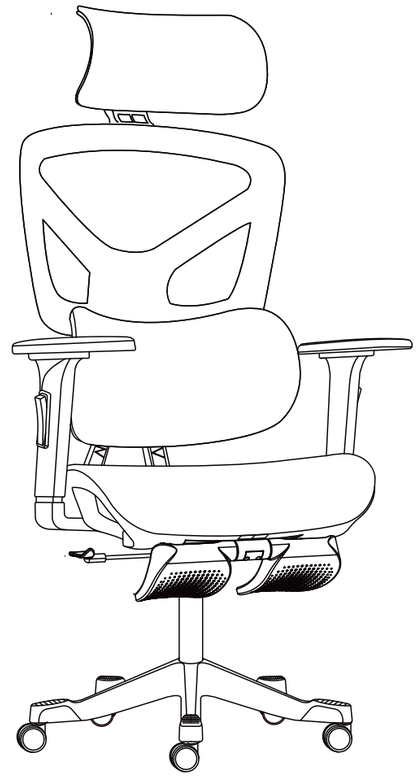



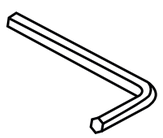


SCREW ACCESSORIES

S1	S2	S3	S4	S5	S6
					
M6x25mm **x6**	M6x20mm **x4**	M8x30mm **x3**	M6x20mm **x2**	M6x16mm **x4**	Allen Key **x1**
Φ 6x14x1.2mm	Φ 6x16x1.2mm				

PARTS ACCESSORIES

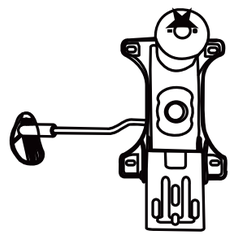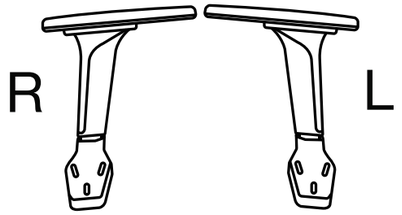
A	B	C	D	E
				
Caster Wheel **x5**	Gas Lift Piston **x1**	Star Base **x1**	Seat Mechanism **x1**	Armrest (Left & Right) **x2**

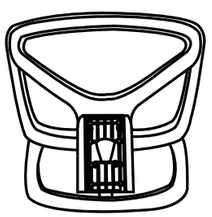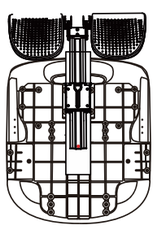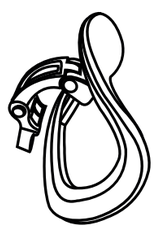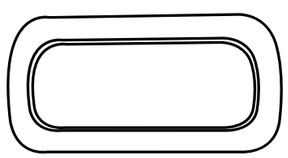F	G	H	I	J	K
					
Backrest **x1**	Back Support Bracket **x1**	Seat Cushion **x1**	Headrest **x1**	Backrest Screw Cover **x1**	Headrest Screw Cover **x1**

STEP 1

Install Caster Wheels


Insert caster wheels (A) into the star base (C).

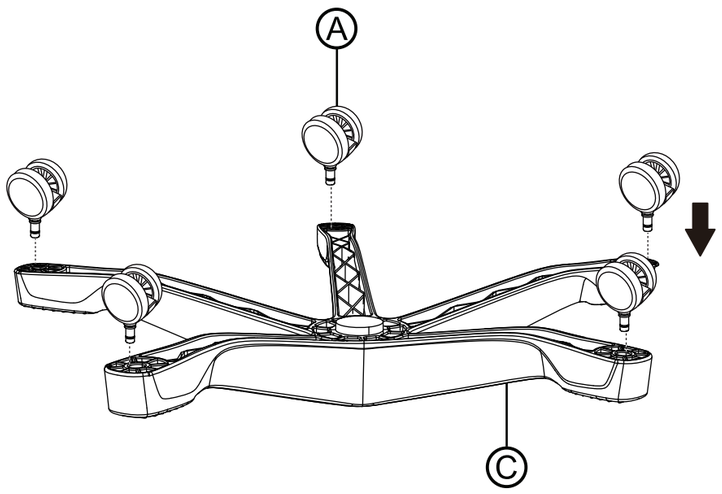

STEP 2

Install Gas Lift

Place the gas lift piston (B) into the center hole of the star base (C).

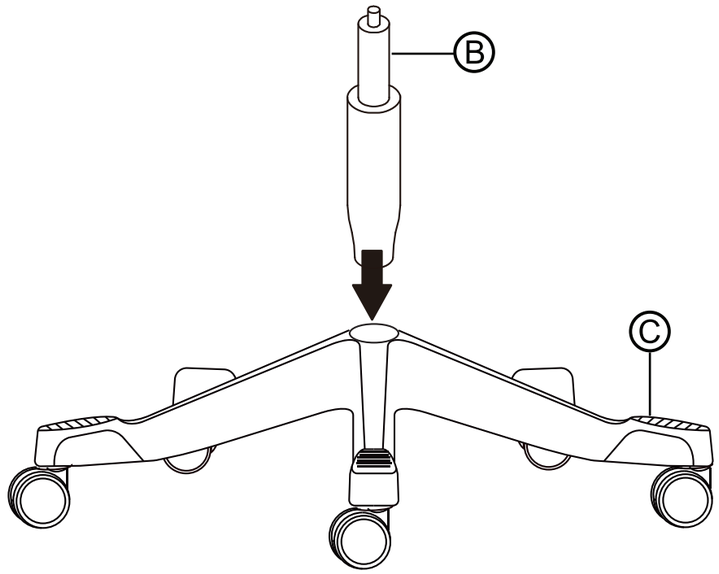

STEP 3

Attach Armrests

Attach the left and right armrests (E) to the seat cushion (H) with screws (S1). Tighten using Allen key (S6).

S1




M6x25mm x6

S6



Allen Key x1

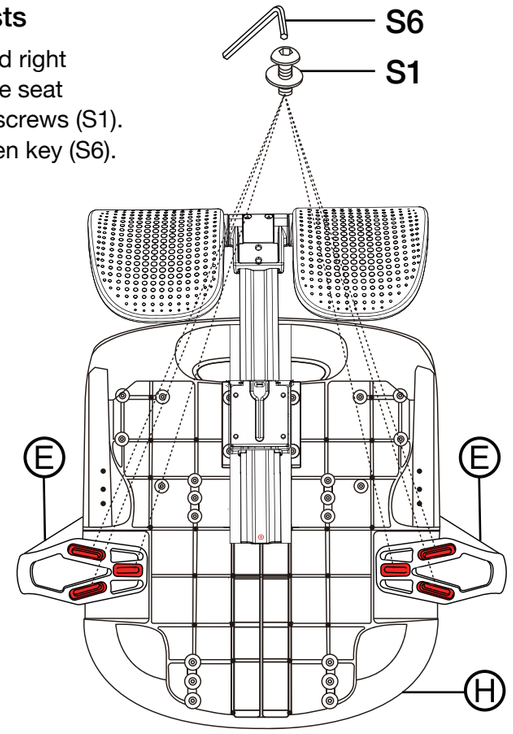

STEP 4

Attach Seat Mechanism

Attach the seat mechanism (D) to the bottom of the seat cushion (H) with screws (S2). Tighten using Allen key (S6).

S2




M6x20mm x4

S6



Allen Key x1

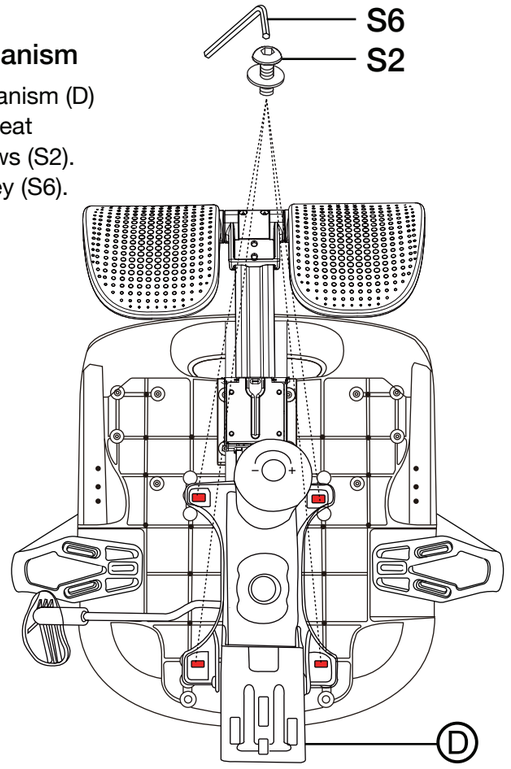

STEP 5

Attach Backrest Support Bracket

Attach the backrest support bracket (G) to the backrest (F) with screws (S5). Tighten using Allen key (S6).

S5




M6x16mm x4

S6



Allen Key x1

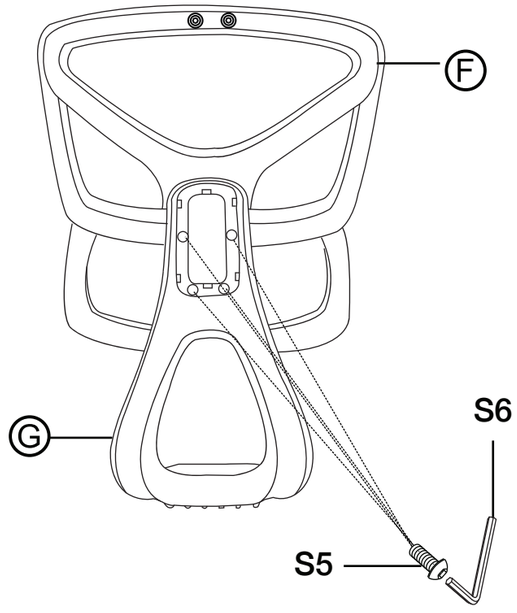

STEP 6

Attach Backrest Assembly

Attach the backrest assembly to the seat cushion using screws (S3). Tighten using Allen key (S6).

S3




M8x30mm x3

S6




Allen Key x1

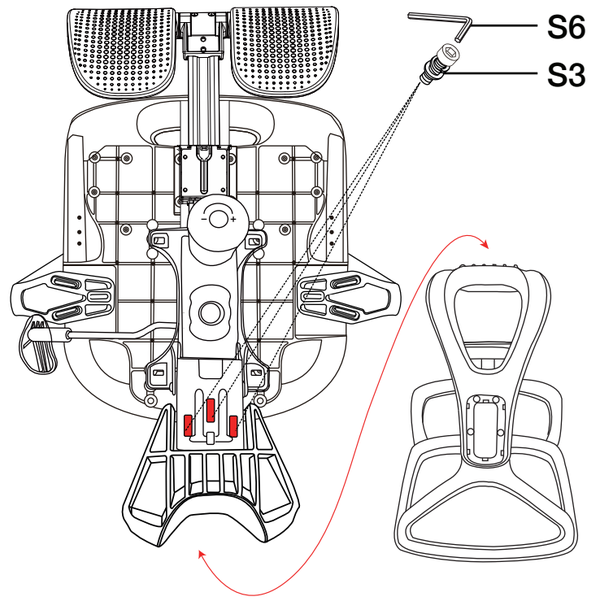

STEP 7

Connect Seat to Base

Place the assembled seat onto the gas lift piston. Press down firmly to secure it in place.

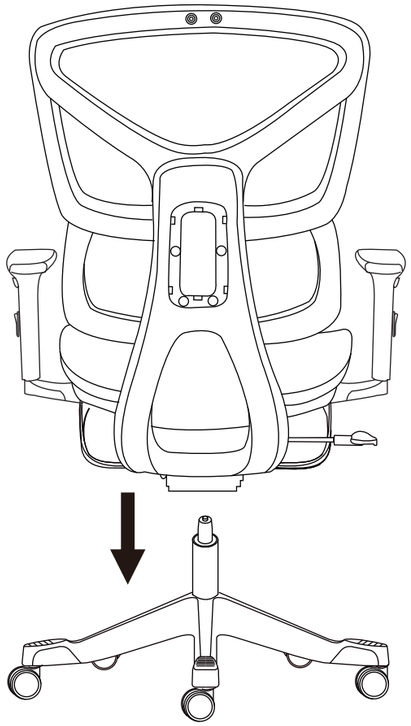

STEP 8

Install Headrest

Attach the headrest (I) to the top of the backrest with screws (S4). Tighten using Allen key (S6).

S4




M6x20mm x2

S6




Allen Key x1

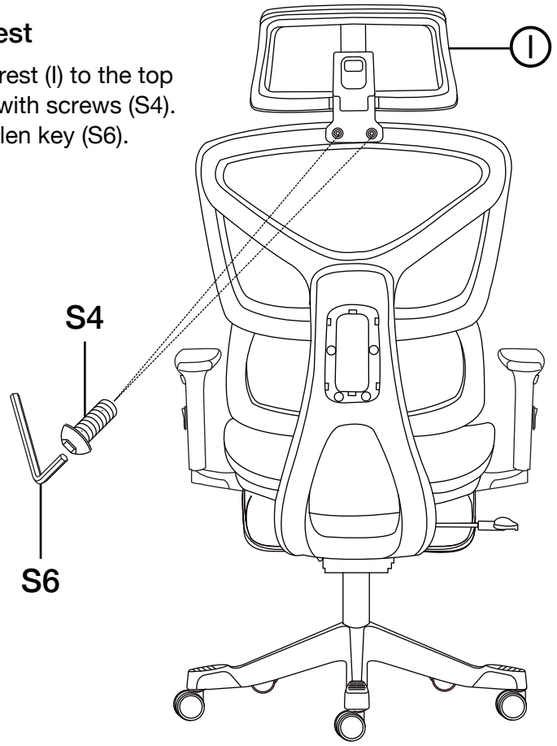

STEP 9

Install Cover Caps

Install the cover caps (J) and (K) to cover the exposed screw holes.

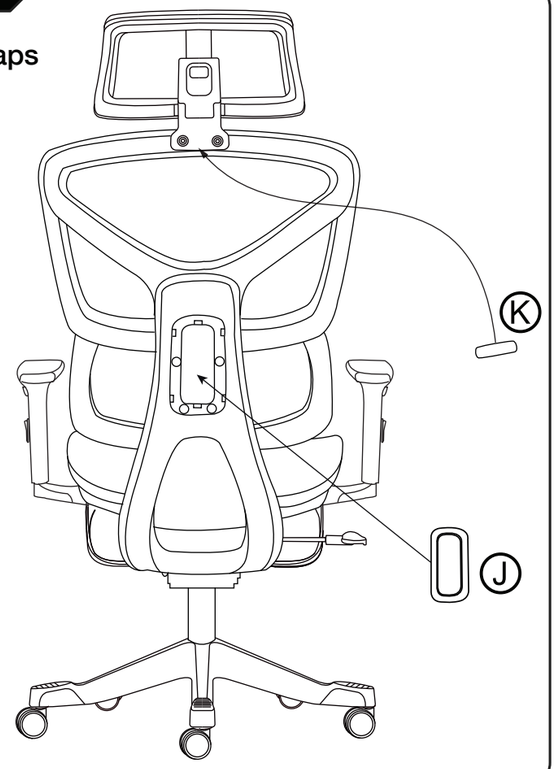

STEP 10

Finish Assembly

Check that all parts are securely installed and the chair is ready for use.

